 


BUTTONS

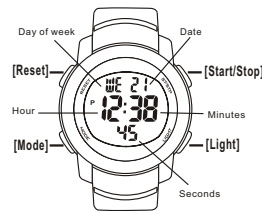

Battery: CR2025

b ALARM

Alarm & Chime On/Off

 
 
 


Alarm Time Setting




c STOPWATCH

A Lap Time




d DUAL TIME

 Dual time mode









d DUAL TIME

 Dual time mode



MODE AUSWAHL

      

HINTERGRUNDBELEUCHTUNG



TASTEN



 
 
 
 
 
 
 
Batterie: CR2025

b ALARM

Alarm & Chime an / aus





Alarm Modus



d DUAL ZEIT

  Dual Zeit Modus




SELECCIÓN DE MODO







 
SÉLECTION MODE

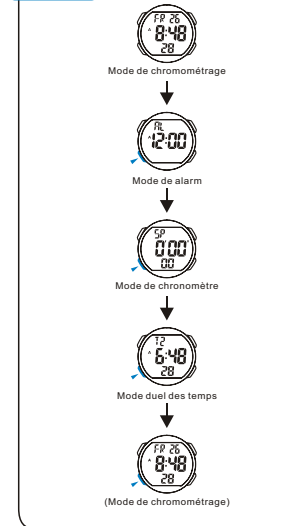

a CHRONOMÉTRAGE

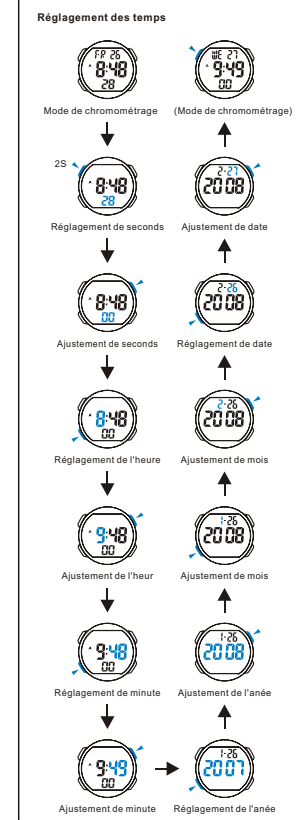  



LUMINEUX

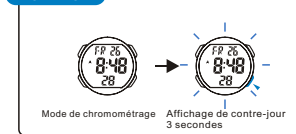 



BOUTONS



  
b ALARM

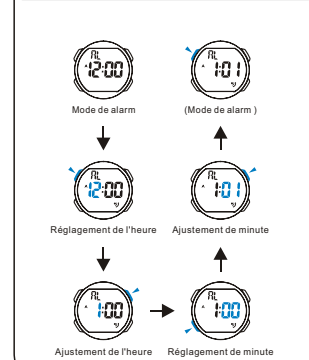


c CHRONOMÈTRE

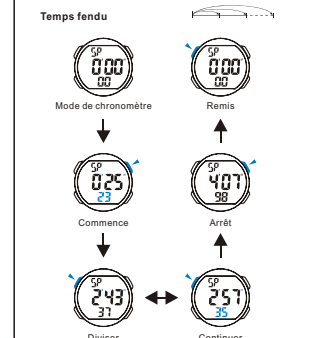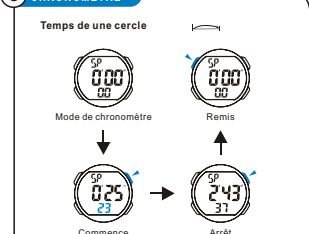  


d DUEL DES TEMPS

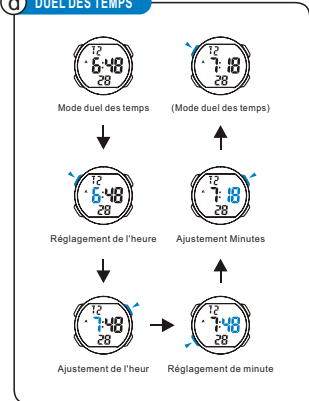 

ВЫБОР МОДЕЛИ

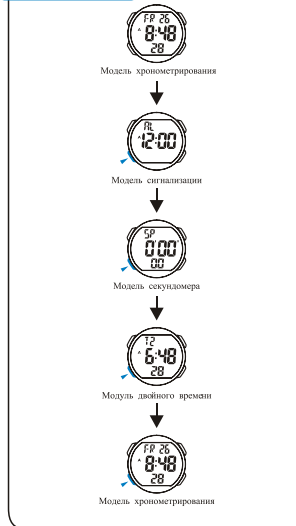 

a ХРОНОМЕТРИРОВАНИЕ

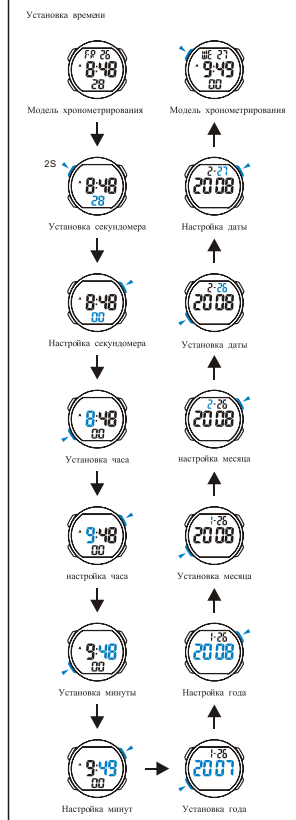 


ПОДСВЕТ




КНОПКИ



 
b СИГНАЛИЗАЦИЯ

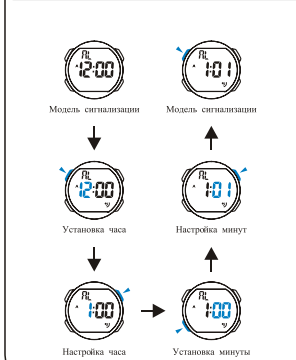


c СЕКУНДОМЕР

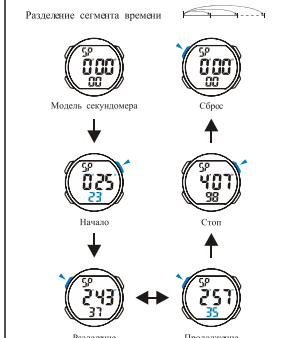 

d ДВОЙНОЕ ВРЕМЯ

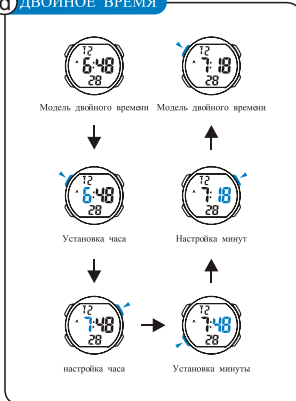 

MODALITÀ DI SELEZIONE

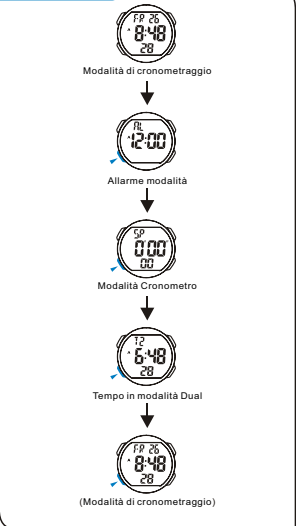 

a Cronometraggio



 
Retroilluminazione





TASTI




b ALLARME

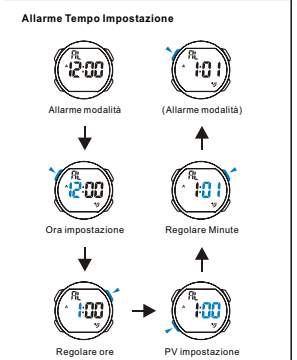


c CRONOMETRO

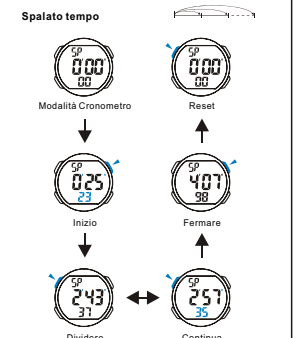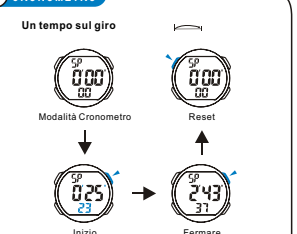  


d DUALTIME

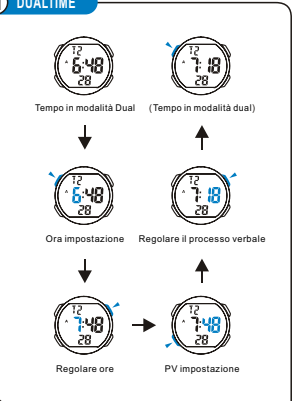 

模式選擇

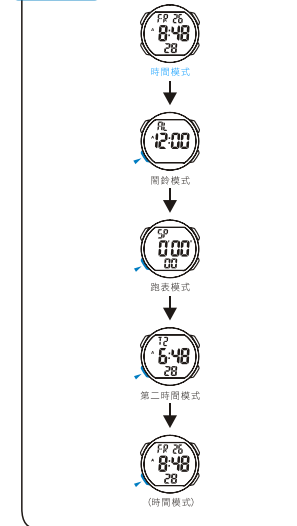 


a 時間

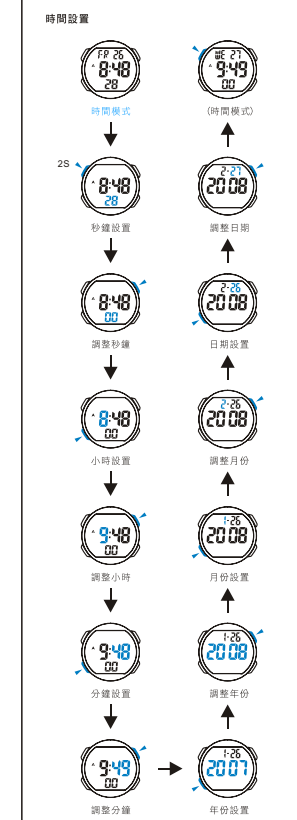 


冷光




 
按 鍵

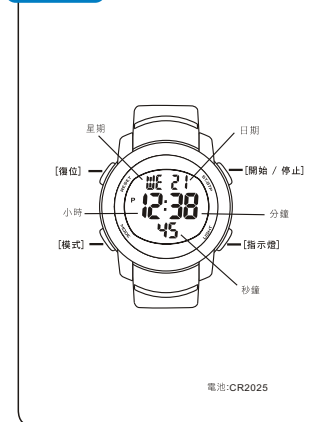

b 鬧 鈴

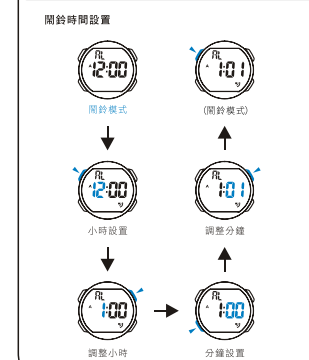 

c 跑 表

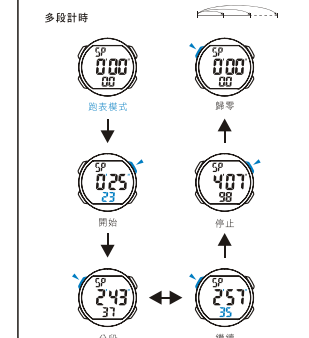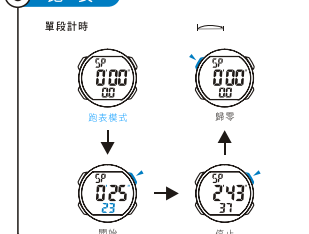  

d 第二時間

