 
 
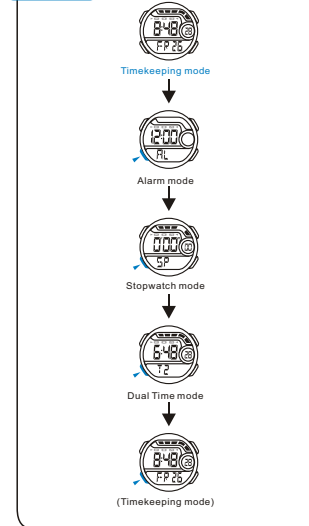 
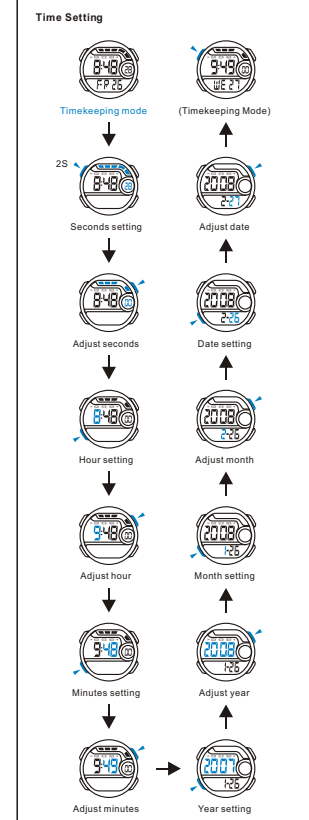 



MODE SELECTION




a TIMEKEEPING




 
BACKLIGHT

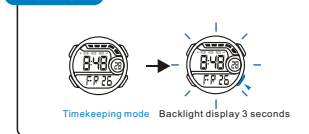


BUTTONS

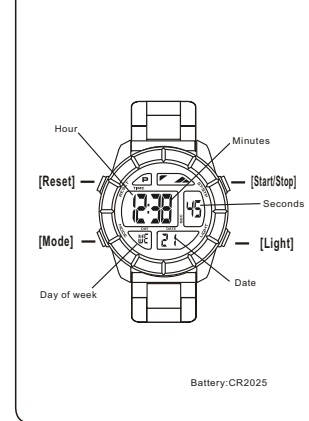 


b ALARM

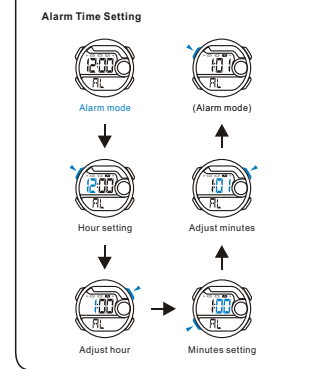  


c STOPWATCH

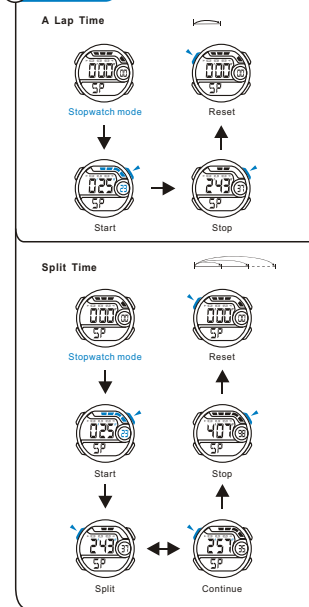 


d DUAL TIME

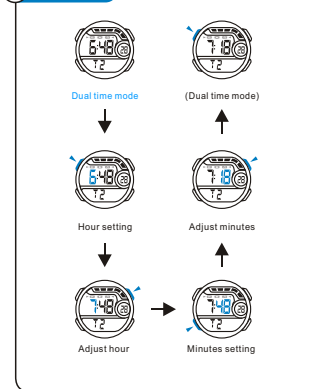 

MODE AUSWAHL

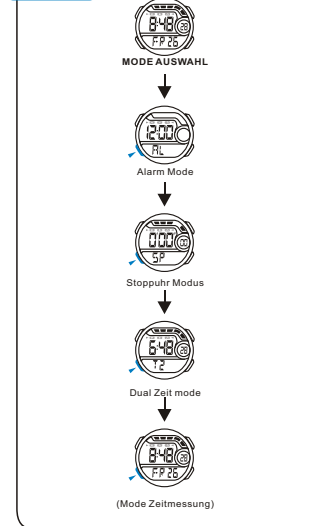 


a Zeitmessung

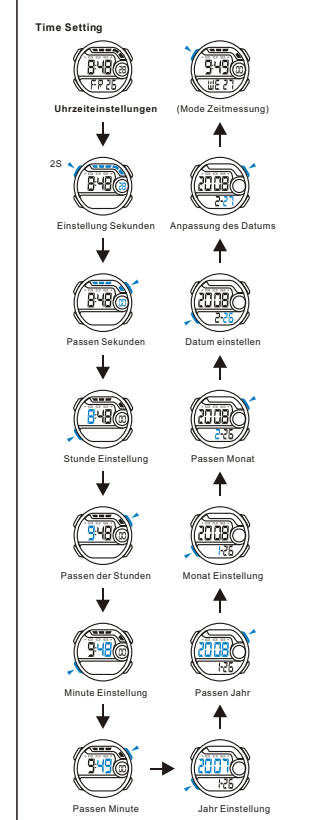 



Hintergrundbeleuchtung



 
TASTEN

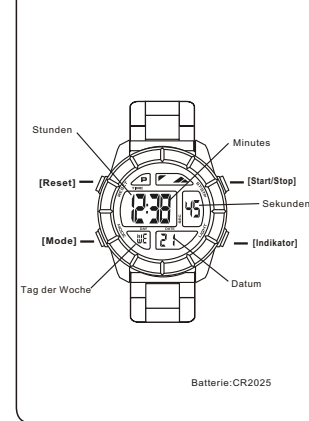



b Alarm

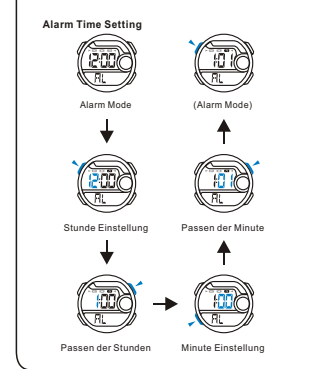  


c Stoppuhr

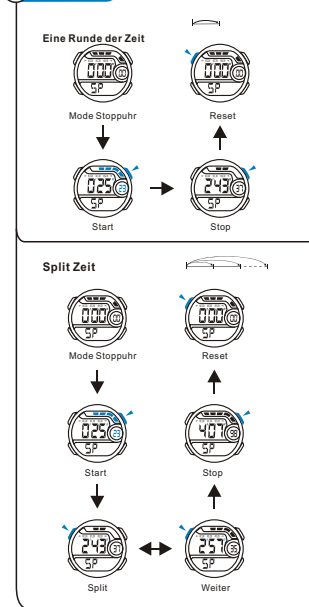 



d Dual Zeit

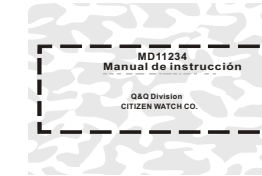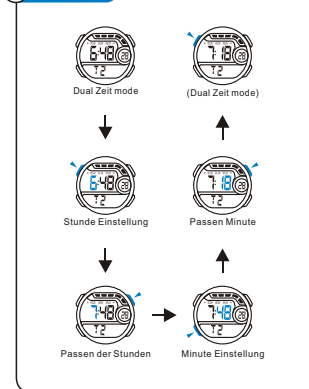  


SELECCIÓN DE MODE

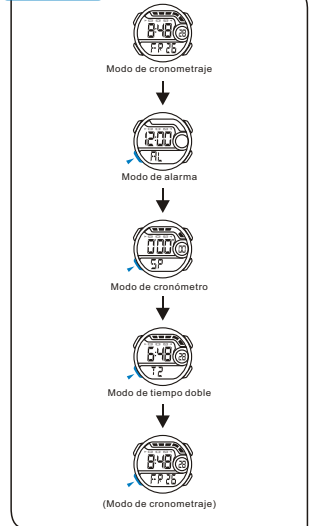 


a Cronometraje

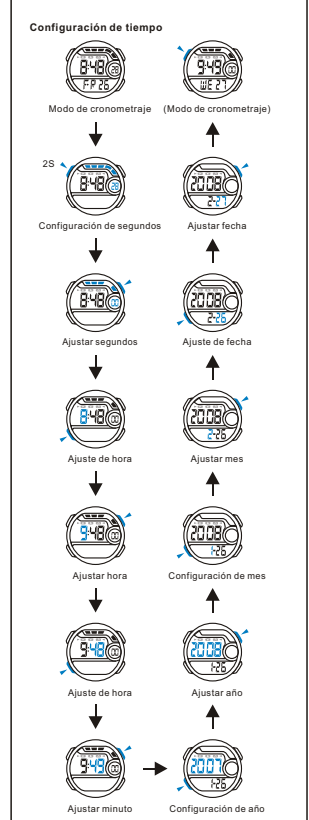  


LUZ TRASERA

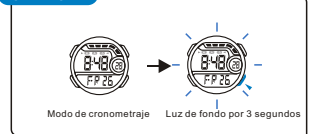 


Botones

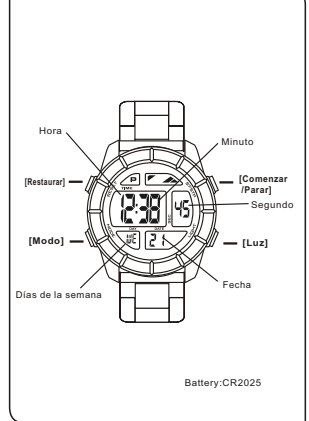 


b ALARMA

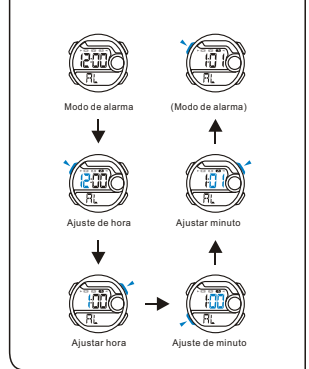 


c Cronómetro

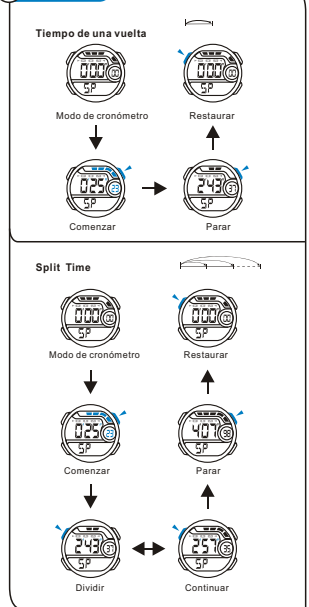 



d TIEMPO DOBLE

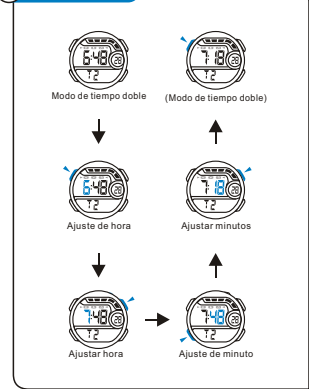 


SELEÇÃO DE MODE

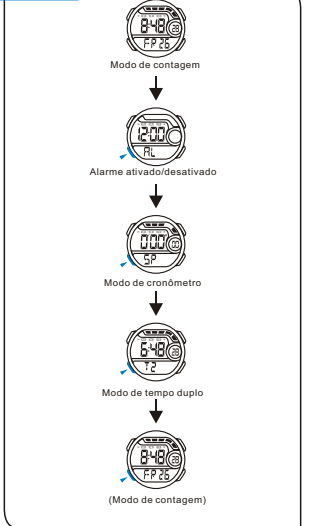 


a Contagem

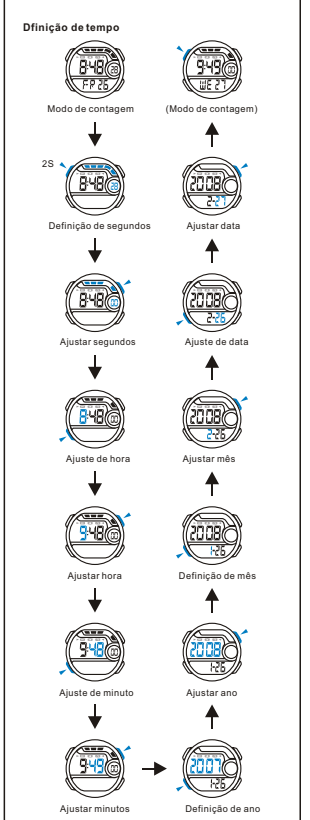  


LUZ DO FUNDO

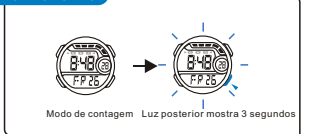 


BOTÕES

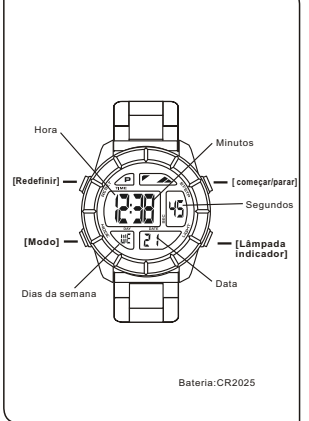 

b ALARME

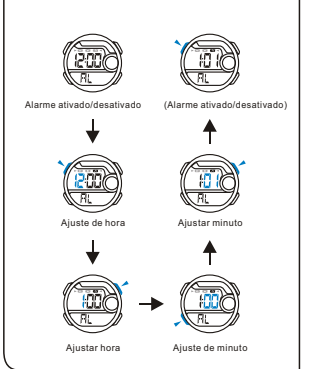 

c CRONÔMETRO

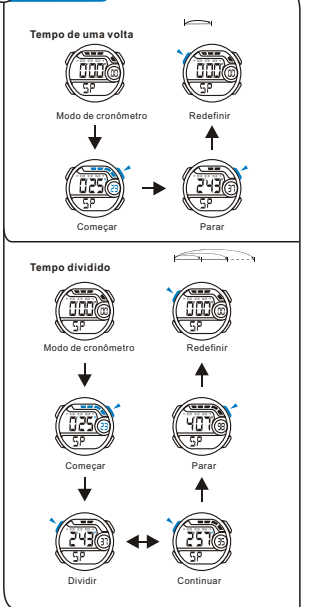 

d TEMPO DUPLA

