





BUTTONS




BACKLIGHT

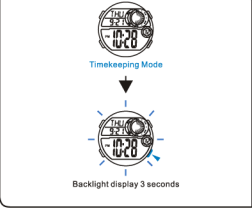


MODE SELECTION

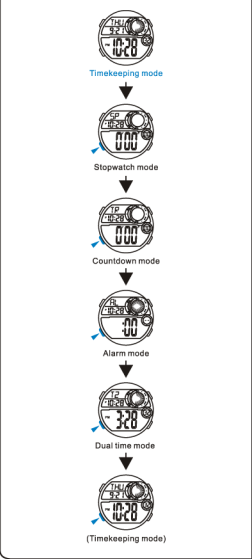


a TIMEKEEPING

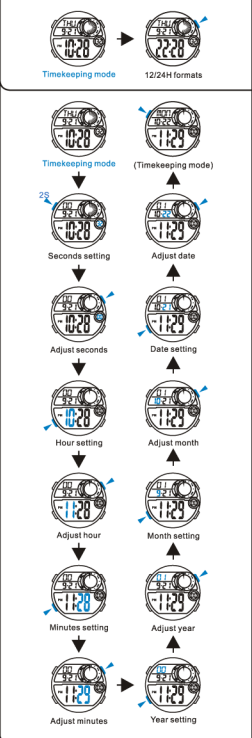


b STOPWATCH

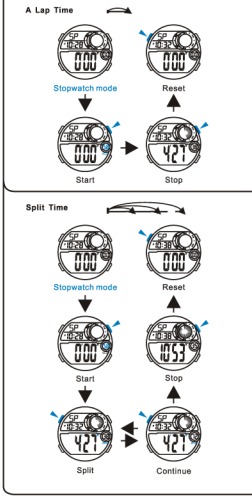


c COUNTDOWN

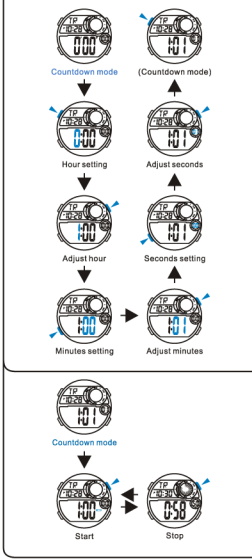

d ALARM

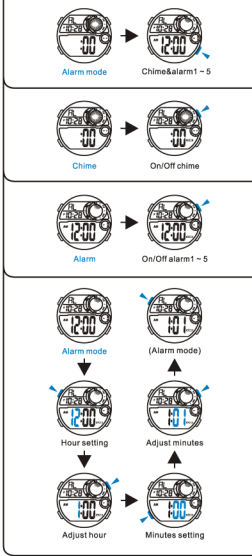

e DUAL TIME

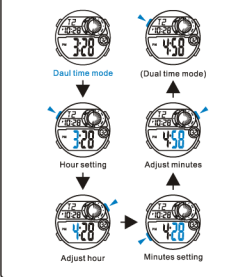


TASTEN




HINTERGRUNDBELEUCHTUNG




MODE AUSWAHL

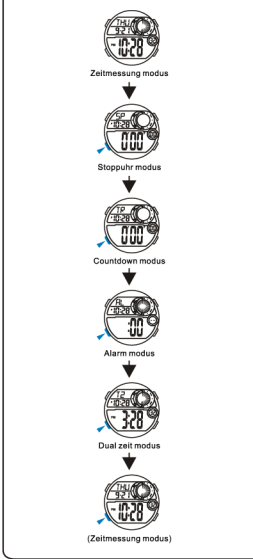


a ZEITMESSUNG

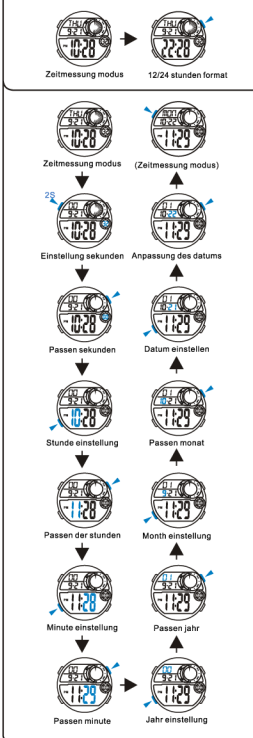


b STOPUHR

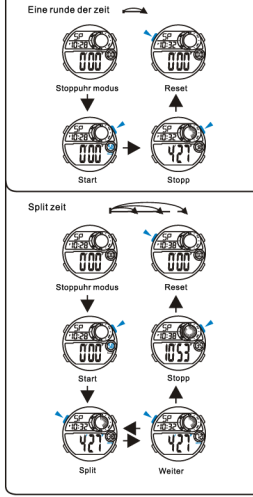


c COUNTDOWN

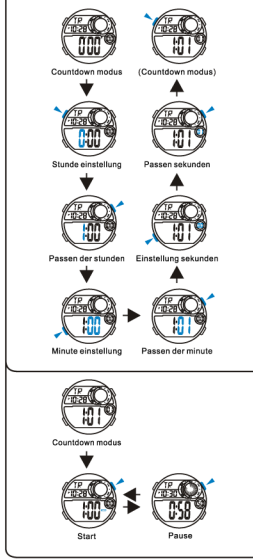

d ALARM

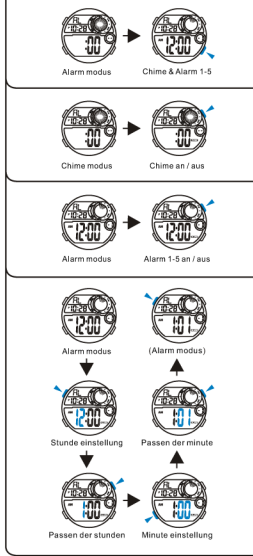


e DUAL ZEIT

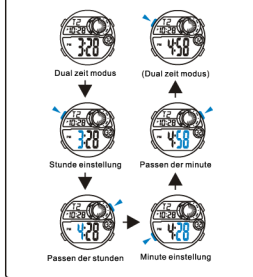


BOTONES




LUZ TRASERA

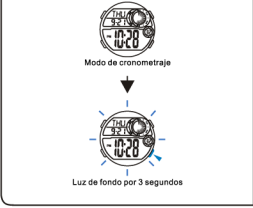


SELECCIÓN DE MODO

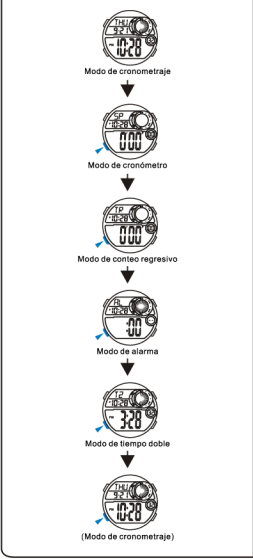


a CRONOMETRAJE

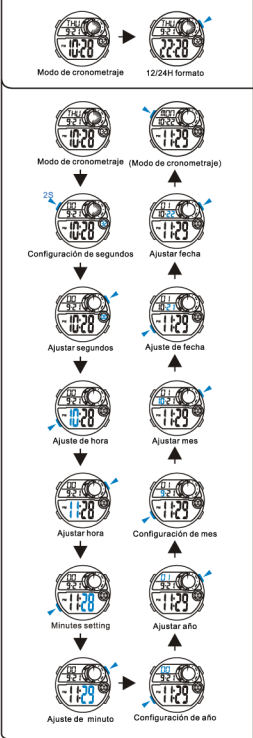


b CRONÓMETRO

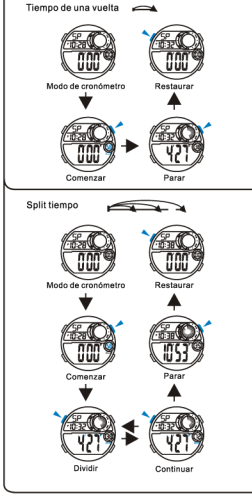


c CONTEO REGRESIVO

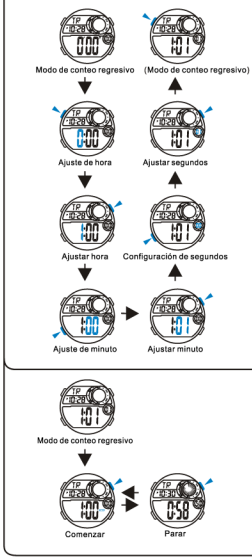

d ALARMA

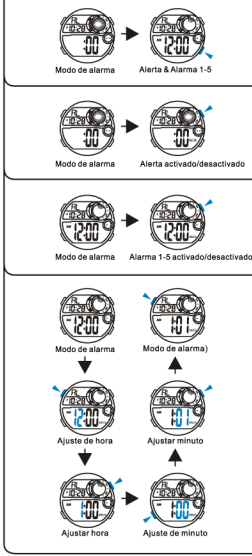

e TIEMPO DOBLE

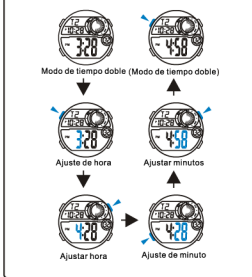


BOTÕES




LUZ




SELEÇÃO DE MODO

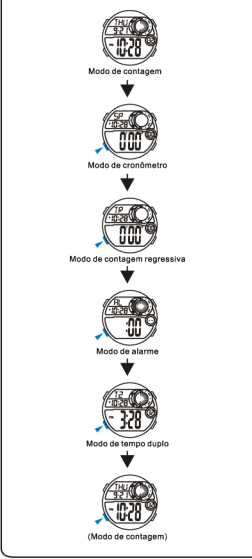


a CONTEM

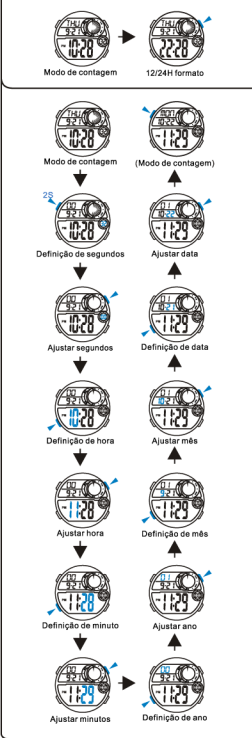


b CRONÔMETRO

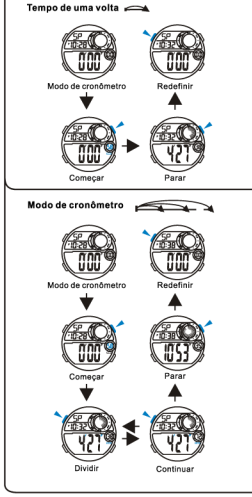

c CONTEM REGRESSIVA

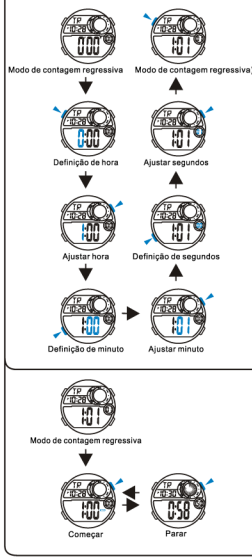

d ALARME

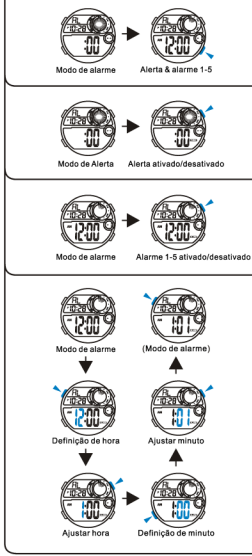

e TEMPO DUPLA

