 





BUTTONS

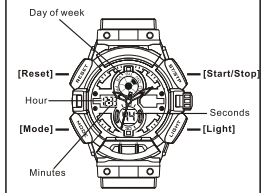


Battery: CR2025

 MODE SELECTION




TASTEN

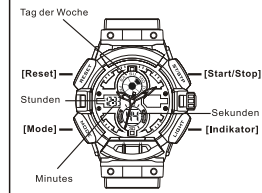 


Batterie: CR2025

 MODE AUSWAHL




BOTONES

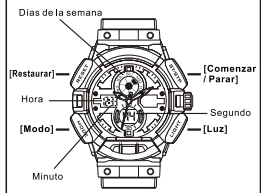 


Batería: CR2025

 SELECCIÓN DE MODE



BOTÕES

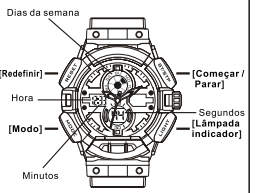 


Bateria: CR2025


SELEÇÃO DE MODE



 
a TIMEKEEPING

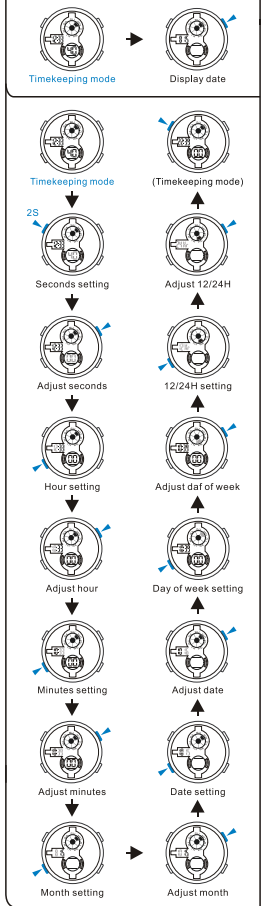


c STOPWATCH

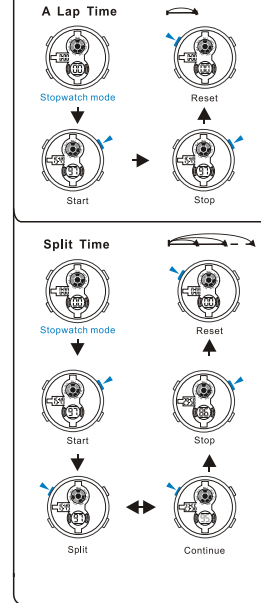 


ADJUST HANDS

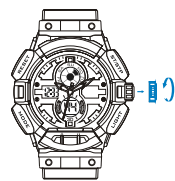 


a Zeitmessung

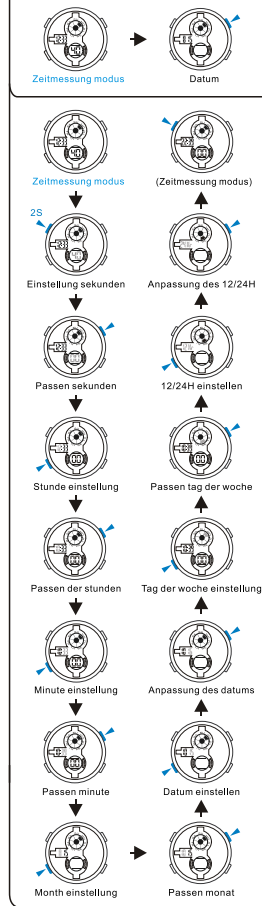 


c STOPPUHR

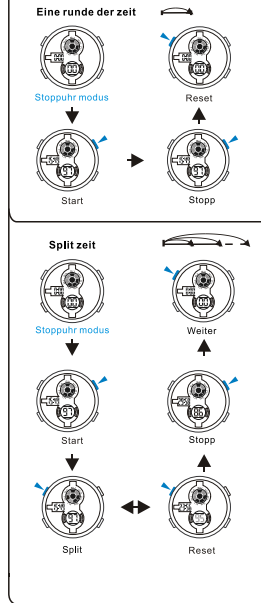 


Uhrzeit-einstellungen

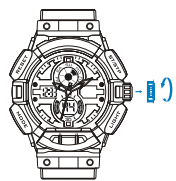 


a CRONOMETRAJE

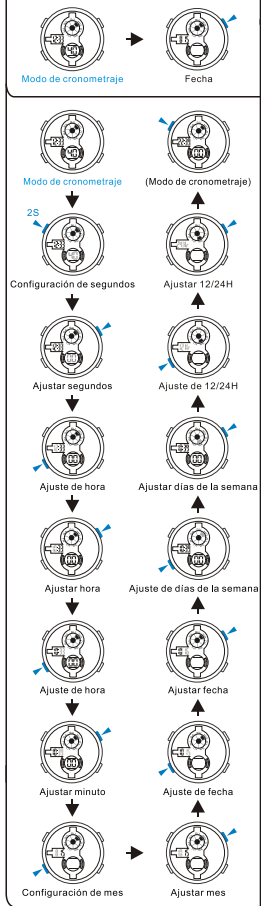 


c CRONOMETRO

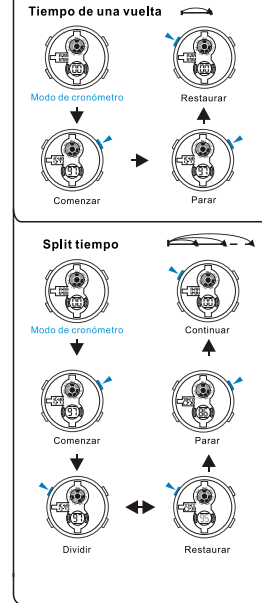 


Ajuste de la hora

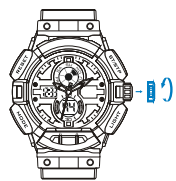 


a CONTAGEM

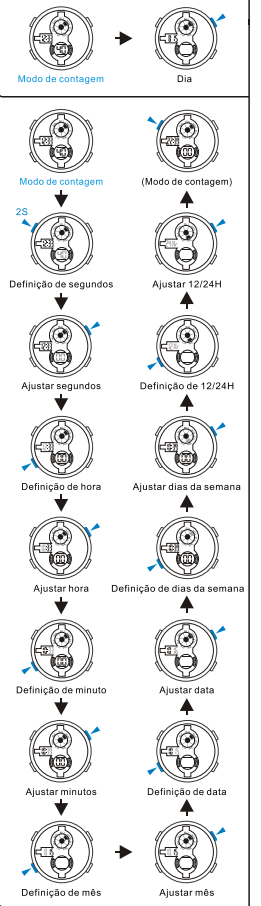 


c CRONÔMETRO

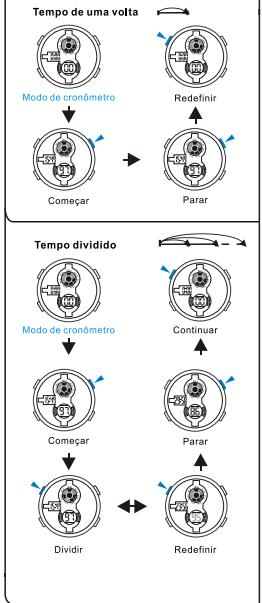 


Ajustar hora

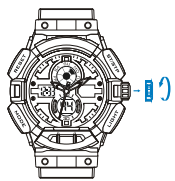 


b ALARM

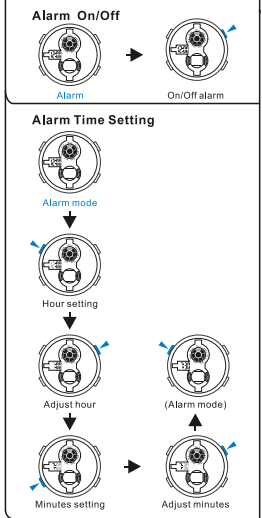 


d DUAL TIME

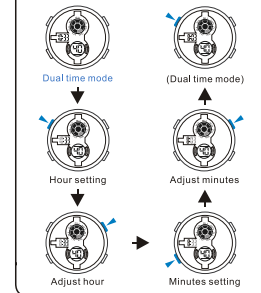 


BACKLIGHT

 


b ALARM

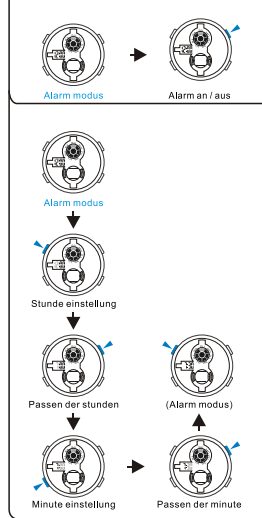 


d Dual Zeit

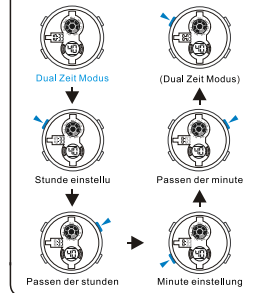 


HINTERGRUNDBELEUCHTUNG

 


b ALARMA

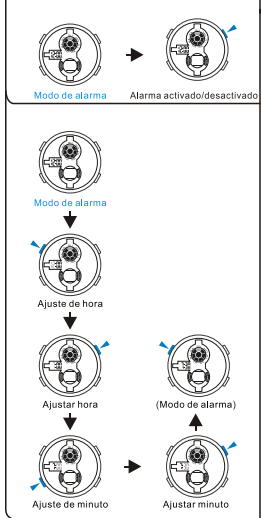 


d DUALTIME

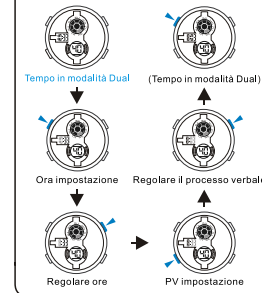 


LUZ TRASERA

 


b ALARME

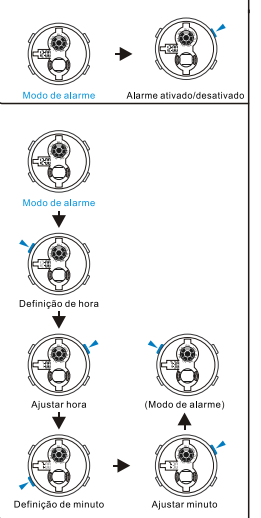 

d TEMPO DUPLO

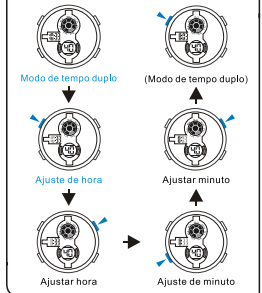 


LUZ

 




BOUTONS

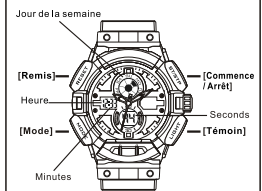 


Batterie :CR2025

 SELECTION MODE

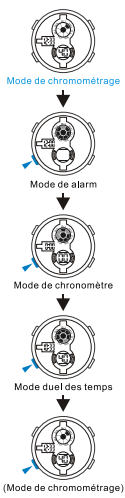


КНОПКИ

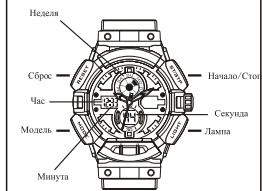 


Батарея :CR2025

 ВЫБОР МОДЕЛИ

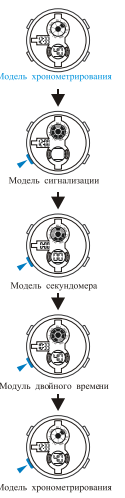


TASTI

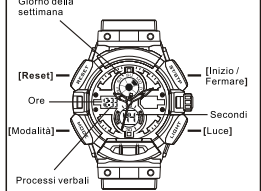 


Batteria:CR2025

 MODALITÀ DI SELEZIONE

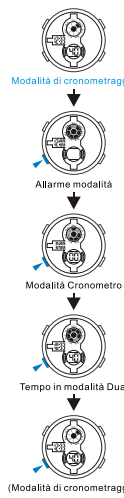


模式選擇

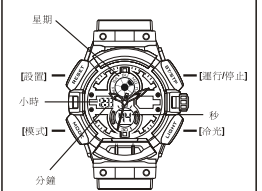 


電池:CR2025

 
模式選擇

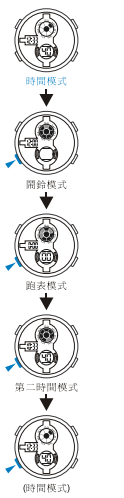


a CHRONOMETRAGE

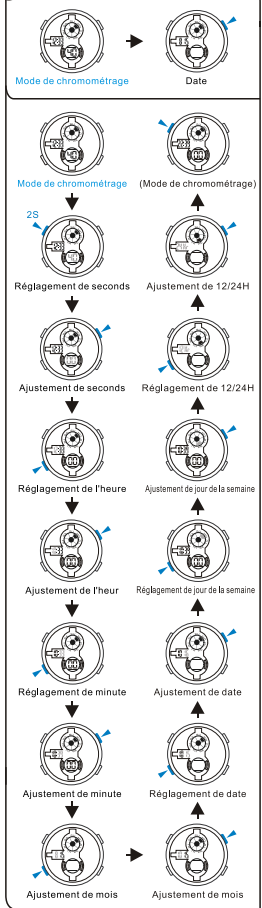 


c CHRONOMETRE

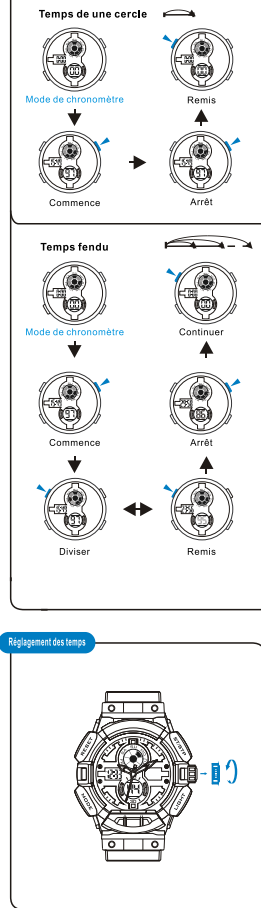 


a ХРОНОМЕТРИРОВАНИЕ

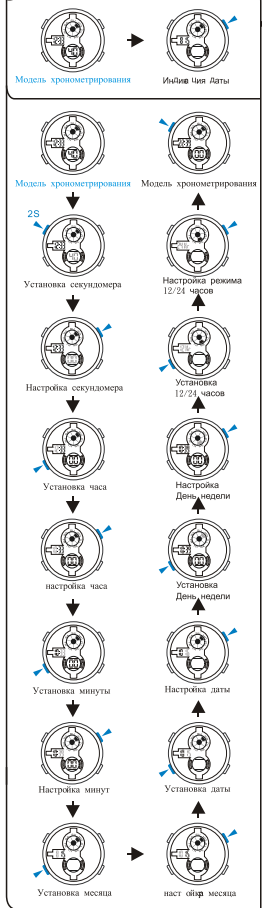 


c СЕКУНДОМЕР

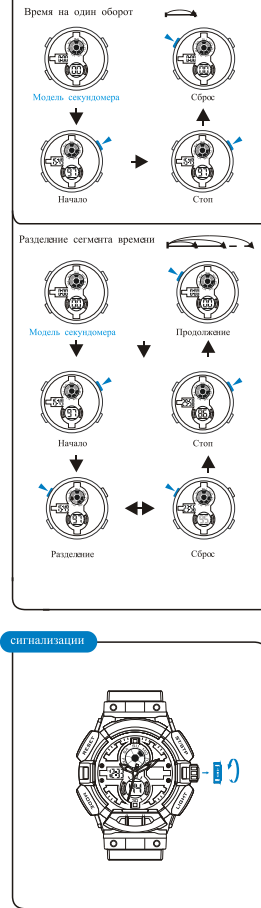 


a Cronometraggio

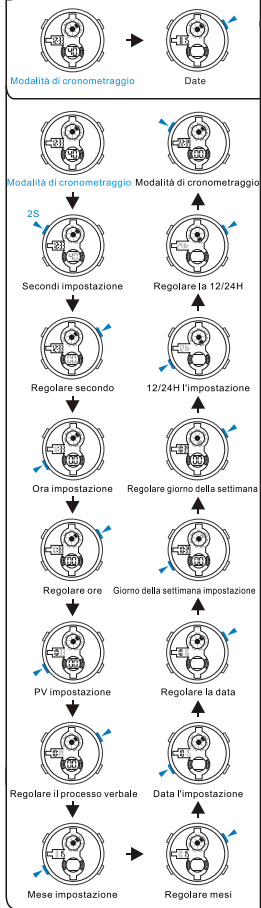 


c CRONOMETRO

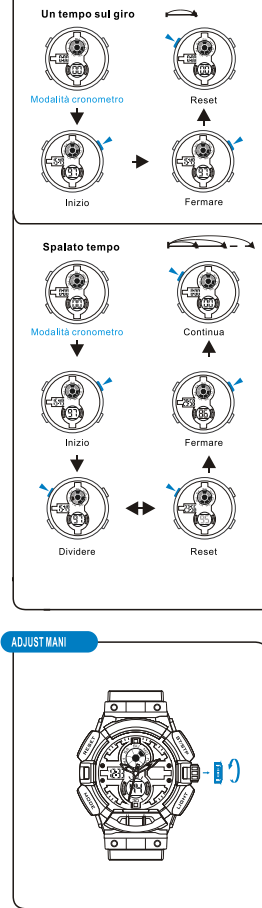 


a 時間

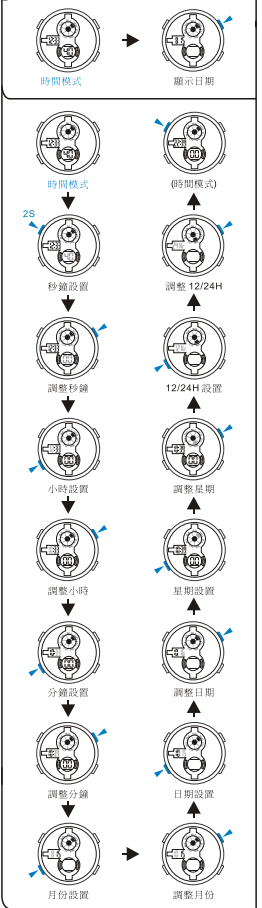 


c 跑表

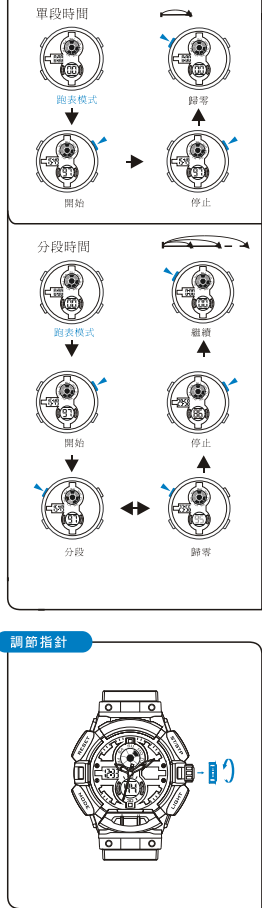 


b ALARM

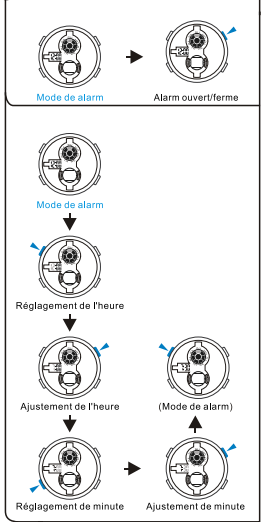 


d DUALTIME

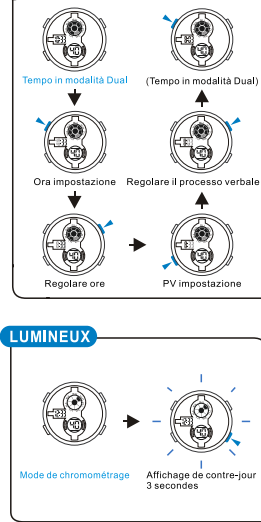 


b СИГНАЛИЗАЦИЯ

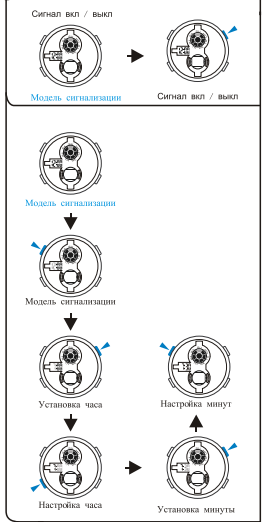 


d ДВОЙНОЕ ВРЕМЯ

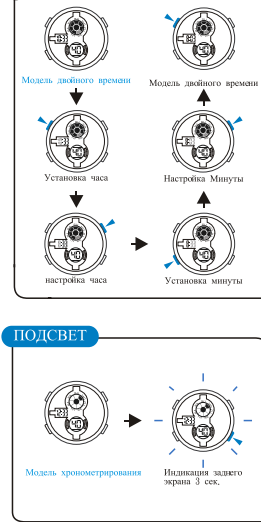 


b ALARM

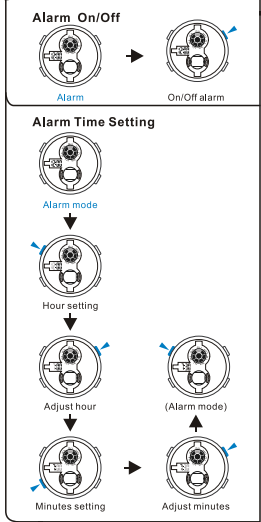 

d DUALTIME

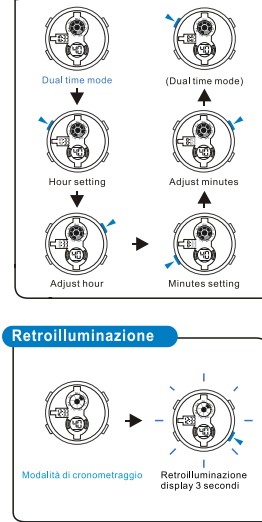 

b 鬧鈴

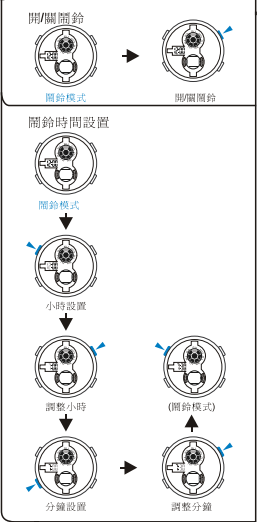 

d 第二時間

